


XTREME DUAL COLOR LED

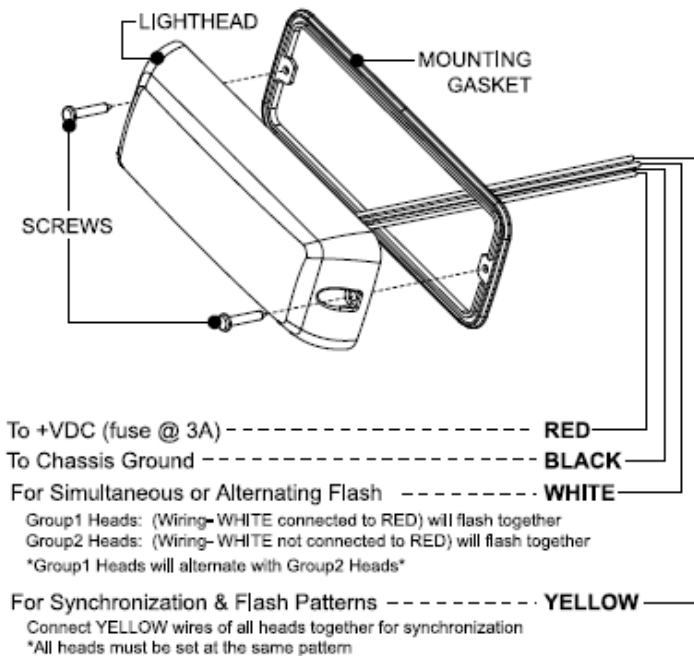

FLASH PATTERN

- 0 Random (all)
- 1 Steady
- 2 Single
- 3 Mega
- 4 Double
- 5 Triple
- 6 Quad
- 7 Quint
- 8 8 Flash
- 9 Single-Quad
- 10 Single H/L
- 11 Single-Triple-Quint

Momentarily apply +VDC to YELLOW wire:

- once for next pattern
- quickly three times for next

Color Mode:

- Color1 only
- Color1 alternate Color2
- Color2 only
- Color2 alternate Color1

Note: This unit is not factory set at pattern 0

070227

For Example – If fitting two Xtreme LED heads that you want to synchronise flash patterns and flash alternately you would connect them as below:

Connect the **RED** of both heads to a 12 Volt positive supply

Connect the **BLACK** of each head to the negative (Ground) of the vehicle

Connect the **YELLOW** wire of both heads together to enable synchronisation of the flash patterns (If a flash pattern change switch is being installed then connect the

YELLOW wires to one side of the flash pattern change switch and the other side of the switch to a 12v Volt positive supply.

Connect the **WHITE** wire of one head only to the **RED** 12 Volt Positive Supply.

Once the above wires have been connected then reset the flash patterns by turning on the lights and either connect the yellow wires to the vehicles 12 Volt Positive

To change the colour of the LED head press the flash pattern change switch (if installed) three times quickly or connect the yellow wire to a positive 12 volt supply three times. The head will now change from it's initial colour to alternating between the two set colours. If you then press the flash pattern change switch a further three times it will then change to your second colour.

For Example if you have a Blue/Amber LED head and the current colour flashing is AMBER, if you then press the flash pattern change switch three times then the head wil change to flashing AMBER/BLUE, if you then press the flash pattern change switch three times quickly again the LED head will change to BLUE and flash at the set flash pattern.

By connecting the yellow wires to a positive supply (or activating the flash pattern change switch) for 1 second at a time you can cycle through the flash patterns until the desired pattern is achieved.

Once selected the units will remember the selected flash pattern.